

JoJo Filter Jug


Instructions for use and additional helpful product tips and information

- For more information about JoJo and our range of products, please visit our website.
- For correct installation, use and maintenance, please read these instructions carefully and keep them safe for future reference.
- If you have questions concerning the product, send an email to filterinfo@jojo.co.za or send us an enquiry via our website and we will assist and advise accordingly.
- When replacing the filter cartridge, ensure you use a JoJo filter cartridge.

Features & Benefits

- ✓ 1,6 litre capacity
- ✓ Filters up to 480 litres of water*
- ✓ Unique Disruptor™ 5293 PAC-S technology
- ✓ Powdered Activated Carbon reduces odours and improves the taste
- ✓ Anti-microbial silver disinfects
- ✓ BPA-free food-grade materials
- ✓ 100% recyclable (excl. filter)
- ✓ Compact and lightweight
- ✓ Easily fits inside a standard fridge door
- ✓ Ergonomically designed
- ✓ LCD filter change reminder

PACK CONTENTS

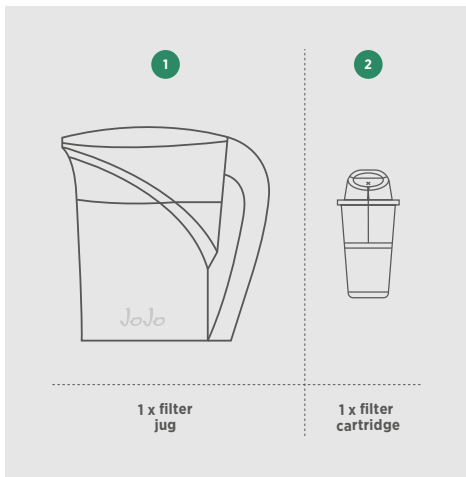

Product Specifications

Filter capacity: 480 litres*


Filter life: 300 refills or 2 months*

**Note: because water quality and volume of consumption varies, filter service life will also vary. It is advised to use municipal water to prolong the lifespan of your filter.*

i Important


In order to increase effectiveness and lifespan of filtration, it is advised to use municipal water. Please contact us for more information.

DIRECTIONS FOR USE & FILTER REPLACEMENT

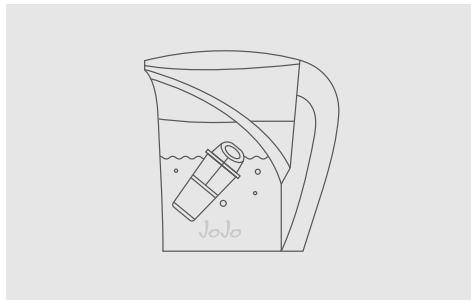


Submerge filter under cold tap water, gently shake to remove air bubbles and leave to soak for 5 minutes.

Note: remove the funnel section of the jug and submerge the filter inside the jug or alternatively use the sink.

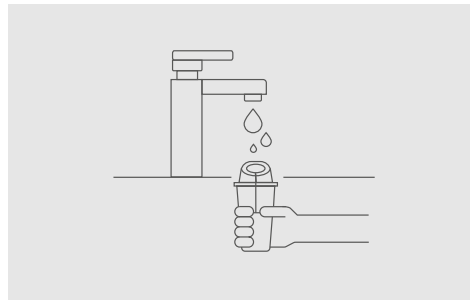

After soaking, rinse filter with cold tap water for 15 seconds.

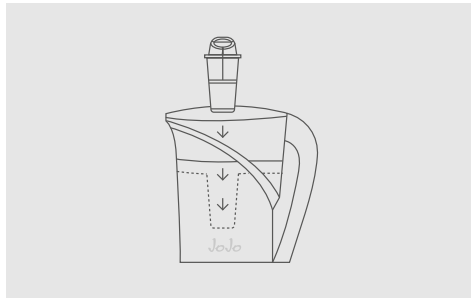


Insert funnel into the jug (if removed for Step 1). Place filter into the hollow of the funnel and push downwards until positioned firmly.



Fill top section with water and allow to flow through filter. Discard water and repeat once. The filter is now activated and ready for use.

DIRECTIONS FOR USE OF FILTER CHANGE REMINDER (CONTINUED)

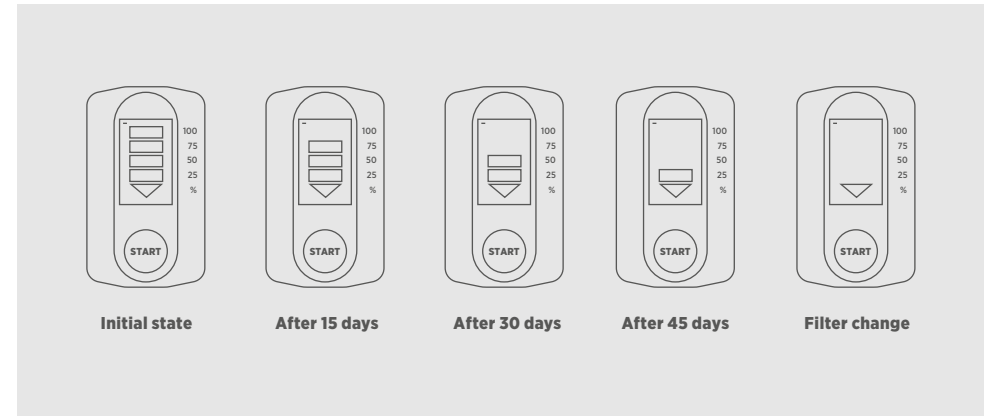

Did You Know?

- This filter jug removes more impurities than any other filter, including harmful bacteria, chlorine, particles and more. It also reduces odours and improves taste.
- Our Disruptor™ filters contain PAC-S (Powdered Activated Carbon with anti-microbial silver for disinfection).
- The JoJo water filter jug was specifically designed to easily fit inside a standard fridge door, giving you access to cold, filtered water as long as you keep your jug full.
- In the beginning, the filtered water may have small black carbon particles, this is normal and has no health effects.

i Important Information

- Ensure that you have activated the filter prior to use as per the instructions provided.
- **Do NOT use hot water** (this filter can only filter cold tap water).
- **Care should be taken in seating the filter securely into the jug, so as to avoid water bypassing a poorly seated filter cartridge.**
- Clean the jug at least once a week using a mild detergent, ensure that the filter is removed before washing it.
- Please note that **the jug is NOT dishwasher safe.**
- If the filtered water develops an odour, please replace the filter immediately.
- Keep the jug away from heating elements eg. oven and coffee machine.
- Store the jug in a cool, dry place.
- The jug itself is recyclable and BPA-free (not including the filter).
- In order to maintain optimum filtration, it is recommended to replace the filter after use of 480 litres or 2 months. **Note:** because water quality and volume of consumption varies, filter service life will also vary.
- In order to increase effectiveness and lifespan of filtration, it is advised to use municipal water in this jug.

DIRECTIONS FOR USE OF FILTER CHANGE REMINDER

- **Start the reminder:** press and hold the “START” button for 3 seconds. When the “START” button is pressed, four bars will light up. When all four are lit and have blinked once, release the button.
- Your reminder is now activated.
- **Using the reminder:** one bar becomes unlit every fifteen days. When only one bar is lit, start preparing to replace the filter.
- After two months all four bars will be unlit and there will be a blinking indicator to remind you that it is time to replace the filter.
- **Turning off the reminder:** slowly press the button four times, the display will darken and go into a dormant state (which can last for 3 years). This function is designed to reduce battery consumption before the product is unpacked and whilst not in use.
- **Turning on the reminder:** press the “START” button once to restart operation.